




## Shift Lever and Boot

1. Unscrew shift control selector lever knob (7213).
2. Remove center console panels. Refer to «Section 01-12».
3. Remove console retaining clip from underside of upper gearshift lever boot (7277).
4. Remove upper gearshift lever boot.
5. Remove two retaining screws and remove gear shift lever (7210).
6. Remove four retaining screws and lower gearshift lever boot.

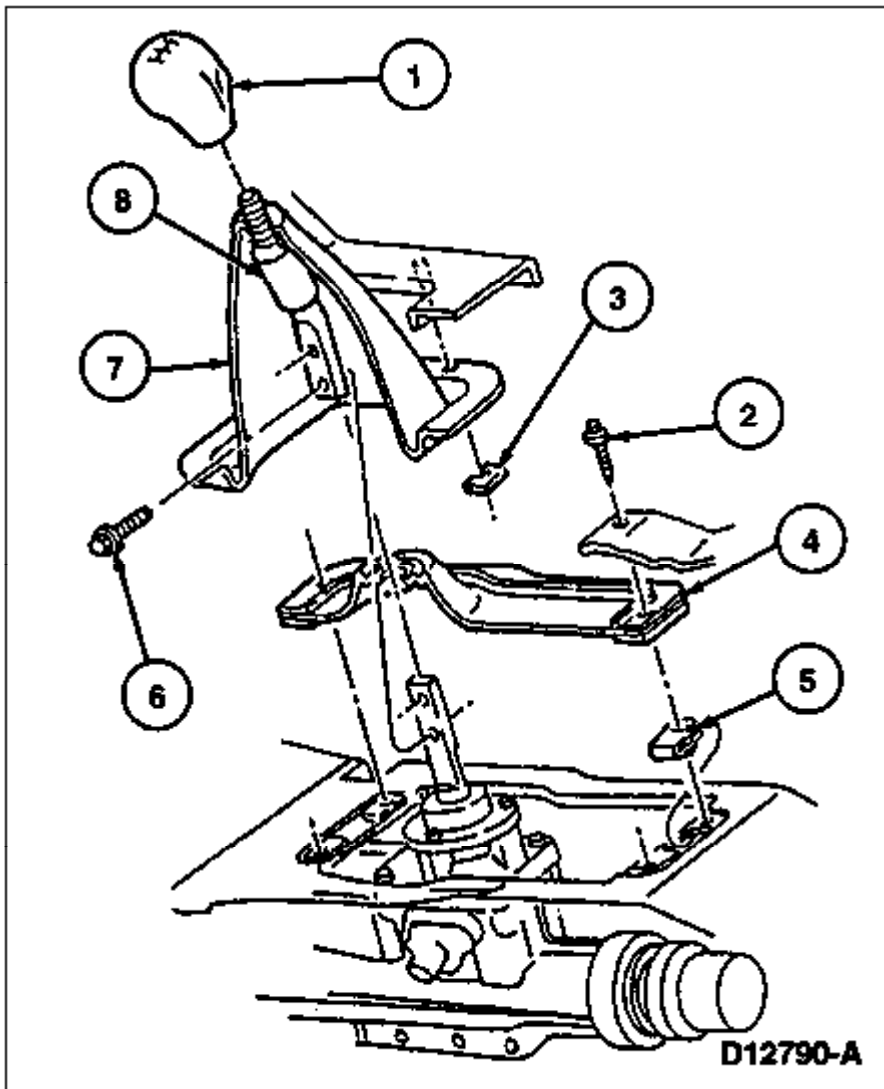

Item	Part Number	Description

1	7213	Shift Control Selector Lever Knob
2	N605893-S2	Lower Dust Boot Retaining Screw
3	-	Upper Dust Boot Retaining Clip
4	7277	Lower Gearshift Lever Boot
5	N623342-S101	Retaining Clip
6	N605905-S100	Gear Shift Lever Retaining Screw
7	7277	Upper Gearshift Lever Boot
8	7210	Gear Shift Lever

---